
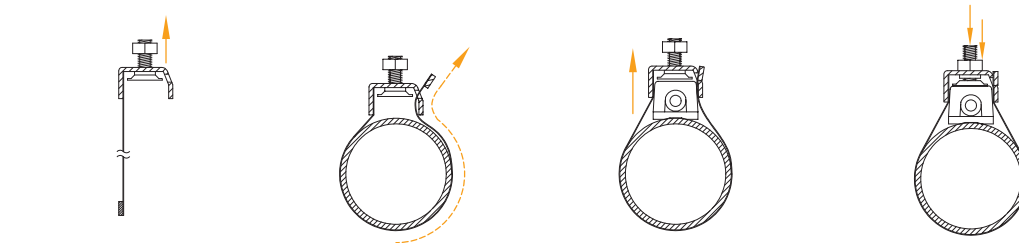


PN Series

Clamp is designed for mounting KT-20 & KT-21 series sensor on round cylinder.

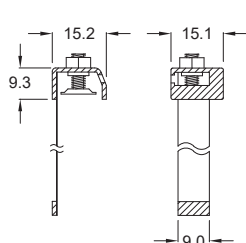

How To Mount

1 Step 1

Loosen screw & nut.

2 Step 2

Wrap the band around the cylinder & put the apex through the fastening hole.

3 Step 3

Pull up mounting head & place sensor under the mounting head.


4 Step 4

Swivel set screw to tighten band and fix sensor. Finally swivel nut for steadying.

Cylinder Chart

Model	Bore Size	Barrel Material	Model	Bore Size	Barrel Material
PN-A16	Ø16	Aluminum	PN-S10	Ø10	Stainless
PN-A20	Ø20	Aluminum	PN-S12	Ø12	Stainless
PN-A25	Ø25	Aluminum	PN-S16	Ø16	Stainless
PN-A30	Ø30	Aluminum	PN-S20	Ø20	Stainless
PN-A32	Ø32	Aluminum	PN-S25	Ø25	Stainless
PN-A40	Ø40	Aluminum	PN-S32	Ø32	Stainless
PN-A50	Ø50	Aluminum	PN-S40	Ø40	Stainless
PN-A63	Ø63	Aluminum			

 Unit : mm



P N - S 2 0

Barrel Material



S : Stainless steel
A : Aluminum alloy

Bore Size

10 : Ø10 round cylinder
12 : Ø12 round cylinder
...
40 : Ø40 round cylinder

PH Series

Clamp is designed for mounting KT-20 & KT-21 series sensor on round cylinder.

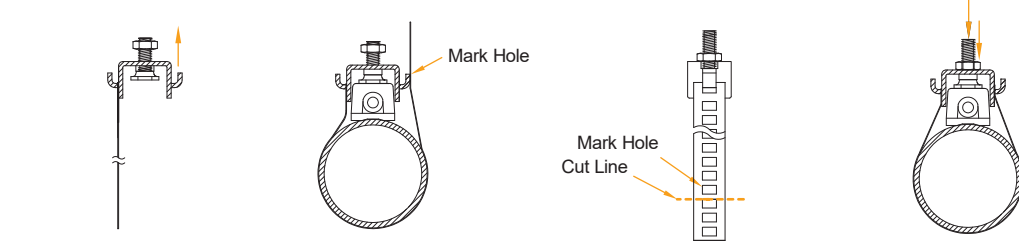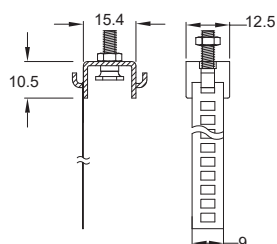

How To Mount

1 Step 1

Loosen screw & nut.

2 Step 2

Place sensor & wrap the band around the cylinder. Position the hook with the nearest hole on the band and mark the hole with a permanent marker.

3 Step 3

Remove mounting assembly. Cut the band at the nearest edge of next hole. (the one that's further away from the mounting head).


4 Step 4

Re-place the sensor & mounting assembly. Wrap the band & put the chosen hole on hook. Position the switch and tighten. Finally swivel nut for steadying.

P H - 1






Band No.

1 : For Ø6 ~ Ø63 round cylinder use.
2 : For Ø6 ~ Ø125 round cylinder use.

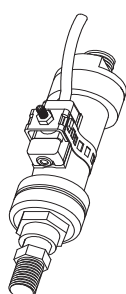

BK Series

 Clamp is designed for mounting KT-05 & KT-15 series sensor on round cylinder.

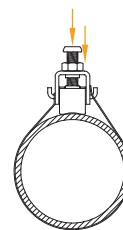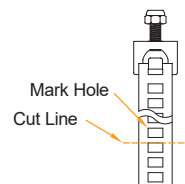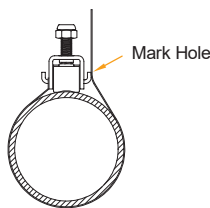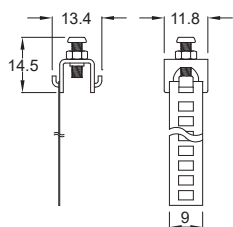

How To Mount

1 Step 1

Loosen screw & nut.

2 Step 2


Place sensor & wrap the band around the cylinder.
Position the hook with the nearest hole on the band and mark the hole with a permanent marker.

3 Step 3

Remove mounting assembly.
Cut the band at the nearest edge of next hole. (the one that's further away from the mounting head).

4 Step 4

Re-place the sensor & mounting assembly.
Wrap the band & put the chosen hole on hook.
Position the switch and tighten.
Finally swivel nut for steadying.

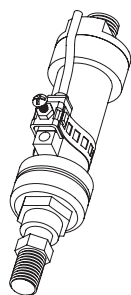

B K - 8 1



Band No.

81 : For $\varnothing 6 \sim \varnothing 32$ round cylinder use.
82 : For $\varnothing 6 \sim \varnothing 63$ round cylinder use.


BS Series

Clamp is designed for mounting KT-48 series sensor on round cylinder.

How To Mount

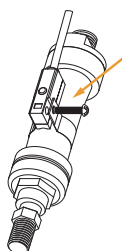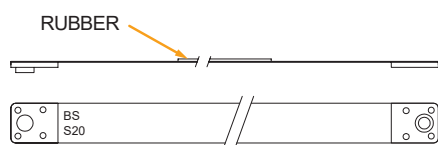

Wrap the band around cylinder barrel and re-insert screw head into clamp.

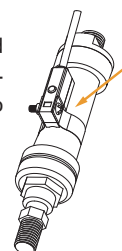

Position the switch and tighten.

B S - S 2 5

Barrel Material

S : Stainless steel
A : aluminum alloy

Bore Size

6 : $\varnothing 6$ round cylinder
8 : $\varnothing 8$ round cylinder
:
40 : $\varnothing 40$ round cylinder

Cylinder Chart

Model	Bore Size	Barrel Material	O.D. (mm)	Model	Bore Size	Barrel Material	O.D. (mm)
BS-A20	$\varnothing 20$	Aluminum	25	BS-S6	$\varnothing 6$	Stainless	8.5
BS-A25	$\varnothing 25$	Aluminum	30	BS-S8	$\varnothing 8$	Stainless	10
BS-A30	$\varnothing 30$	Aluminum	35	BS-S10	$\varnothing 10$	Stainless	11
BS-A32	$\varnothing 32$	Aluminum	37	BS-S12	$\varnothing 12$	Stainless	13.2
BS-A40	$\varnothing 40$	Aluminum	45	BS-S16	$\varnothing 16$	Stainless	17
BS-A50	$\varnothing 50$	Aluminum	55	BS-S20	$\varnothing 20$	Stainless	21.6
BS-A63	$\varnothing 63$	Aluminum	70	BS-S25	$\varnothing 25$	Stainless	26.5
BS-A80	$\varnothing 80$	Aluminum	87.7	BS-S32	$\varnothing 32$	Stainless	33.6
				BS-S40	$\varnothing 40$	Stainless	42

Unit : mm